


SB24100071

FORD TRANSIT CUSTOME Fill and bleed the COOLANT CIRCUIT



OPTION 1: Fill the circuit by positioning the coolant tank above the "T" union.

"T" JOINT

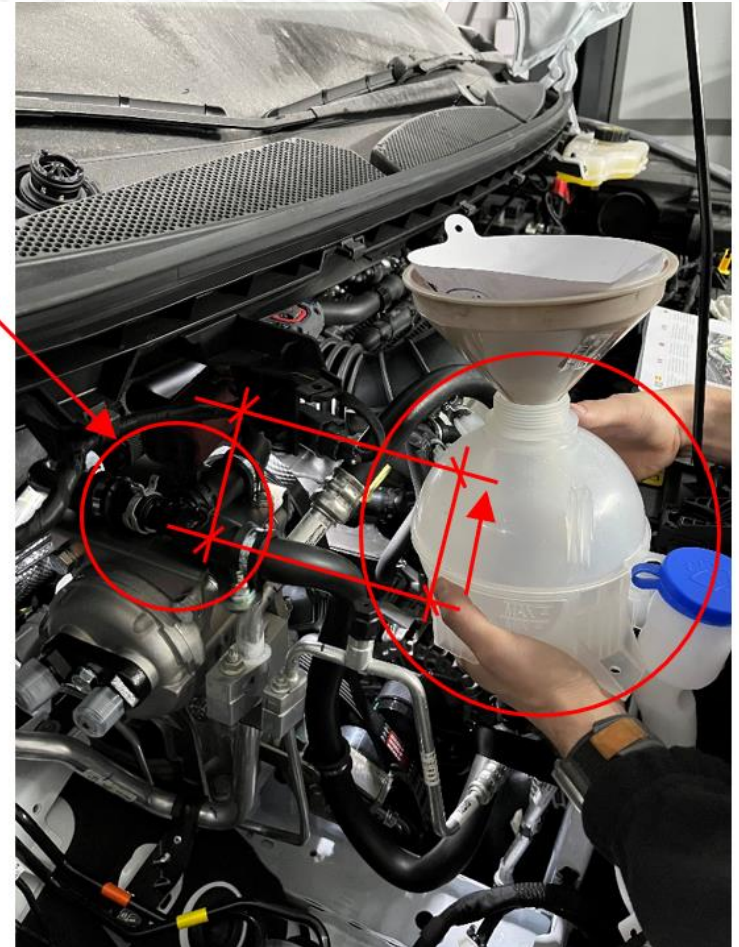

WARNING: ENSURE THAT THE COOLANT CIRCUIT IS FULL AND WITHOUT AIR OR BUBBLES INSIDE


SB24100071

FORD TRANSIT CUSTOMER: Fill and bleed the **COOLANT** **CIRCUIT**



OPTION 2: Blow pressurized air into the tank, forcing the circuit to fill

BLOWING PRESSURISED AIR

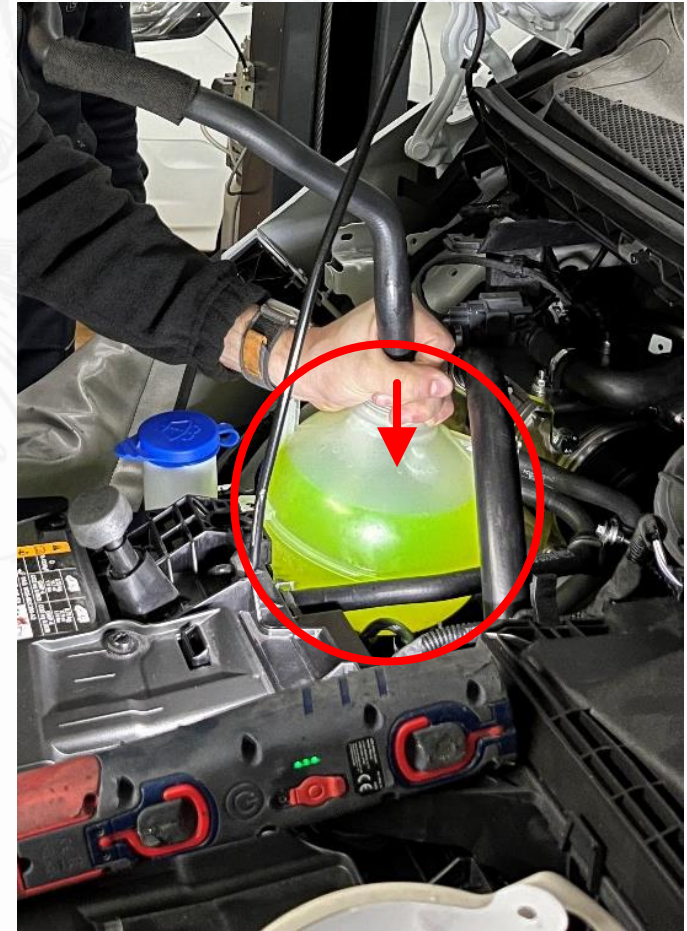

WARNING: ENSURE THAT THE COOLANT CIRCUIT IS FULL AND WITHOUT AIR OR BUBBLES INSIDE



OLIVA TORRAS
MOUNT & DRIVE KITS